

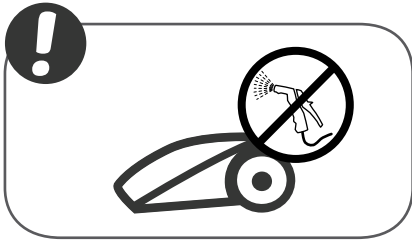
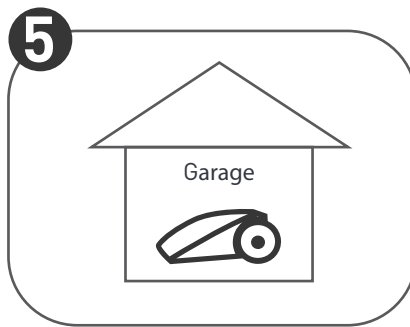
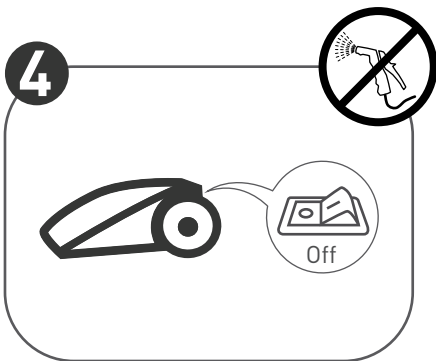
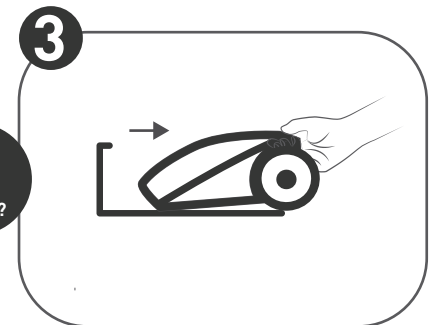


## Charging before winter storage (C models)

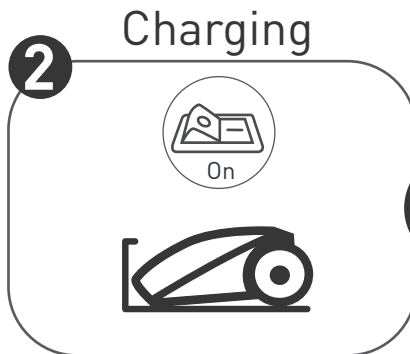

**IMPORTANT!**

NEVER use a water hose or any type of liquid to clean the underside of the mower. Liquids can damage components. Use only a damp or wet cloth to wipe the surface clean after scraping.

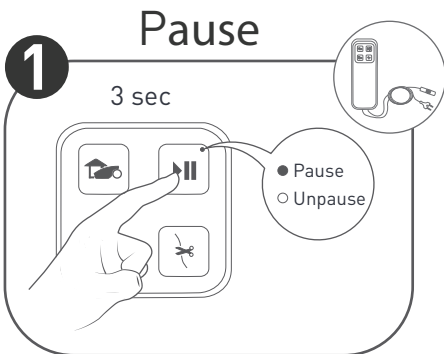

## Starting the season with Robomow

