

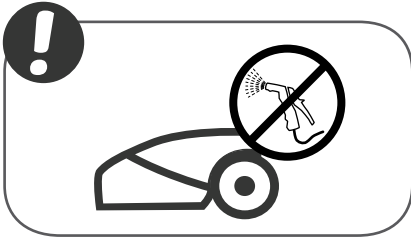
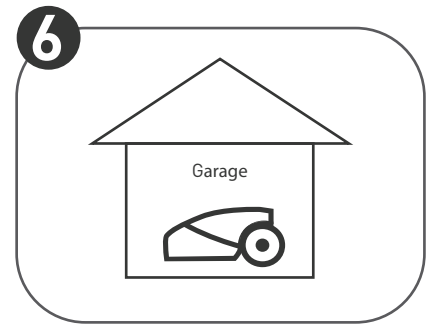
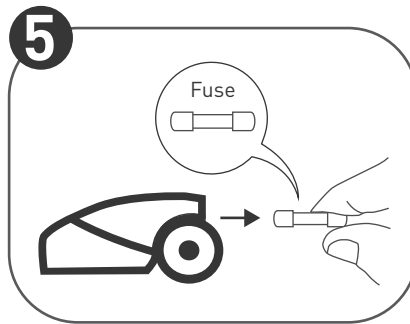
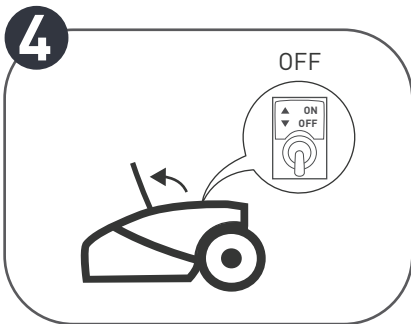
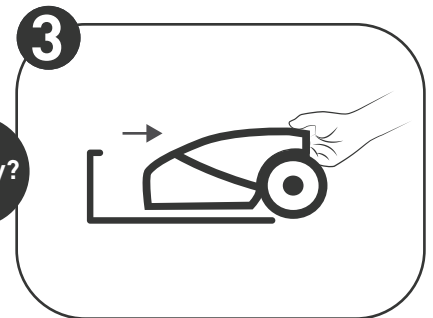


Charging before winter storage (S models)

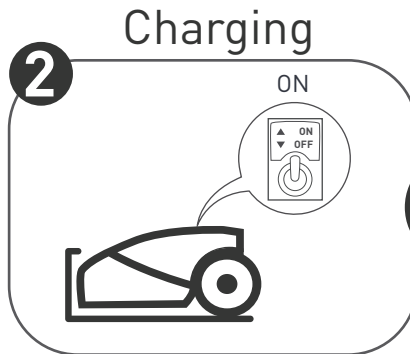

IMPORTANT!

NEVER use a water hose or any type of liquid to clean the underside of the mower. Liquids can damage components. Use only a damp or wet cloth to wipe the surface clean after scraping.

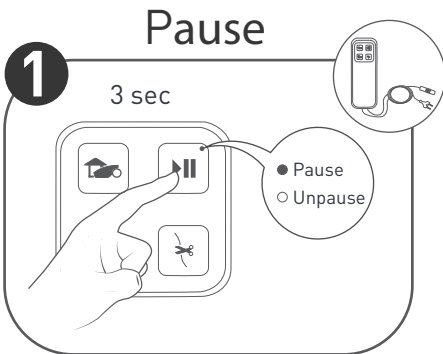

Starting the season with Robomow

